

ANALYTIC SYSTEMS

Power Conversion Solutions

INSTALLATION & OPERATION MANUAL

BCD800 SERIES DC Battery Charger



An ISO9001 and AS9100 Registered Company Battery Chargers • Inverters • Power Supplies • Voltage Converters

8128 River Way, Delta B.C. V4G 1K5 Canada T. 604.946.9981 F. 604.946.9983 TF. 800.668.3884 (US/CANADA)

www.analycsystems.com



ANALYTIC SYSTEMS
Power Conversion Solutions

Copyright (2005-2014) Analytic Systems Ware (1993) Ltd.



IMPORTANT & SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS — This manual contains important safety and operating instructions for battery charger

ALL BATTERY CHARGERS

1. CAUTION - To reduce risk of injury, charge only lead acid or sealed gel cell type rechargeable batteries. Other types of batteries may burst causing personal injury and damage.
2. Do not expose battery charger to rain or snow.
3. Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.
4. Do not disassemble battery charger; take it to a qualified serviceman when service or repair is required. Incorrect reassembly may result in a risk of electric shock or fire.
5. To reduce risk of electric shock, disconnect battery charger from batteries and DC supply before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.

DC BATTERY CHARGERS

1. WARNING - RISK OF EXPLOSIVE GASES.
 - i. WORKING IN VICINITY OF A LEAD-ACID BATTERY IS DANGEROUS. BATTERIES GENERATE EXPLOSIVE GASES DURING NORMAL BATTERY OPERATION. FOR THIS REASON, IT IS OF UTMOST IMPORTANCE THAT EACH TIME BEFORE SERVICING EQUIPMENT IN THE VICINITY OF THE BATTERY, YOU READ THIS MANUAL AND FOLLOW THE INSTRUCTIONS EXACTLY.
 - ii. To reduce risk of battery explosion, follow these instructions and those published by battery manufacturer and manufacturer of any equipment you intend to use in vicinity of battery. Review cautionary marking on these products and on engine.
2. PERSONAL PRECAUTIONS
 - i. Someone should be within range of your voice or close enough to come to your aid when you work near a lead-acid battery.
 - ii. Have plenty of fresh water and soap nearby in case battery acid contacts skin, clothing, or eyes.
 - iii. Wear complete eye protection and clothing protection. Avoid touching eyes while working near battery.
 - iv. If battery acid contacts skin or clothing, wash immediately with soap and water. If acid enters eye, immediately flood eye with running cold water for at least 10 minutes and get medical attention immediately.
 - v. NEVER smoke or allow a spark or flame in vicinity of battery or engine.
 - vi. Be extra cautious to reduce risk of dropping a metal tool onto battery. It might spark or short-circuit battery or other electrical part that may cause explosion.



- vii. Remove personal metal items such as rings, bracelets, necklaces, and watches when working with a lead-acid battery. A lead-acid battery can produce a short-circuit current high enough to weld a ring or the like to metal, causing a severe burn.
- viii. NEVER charge a frozen battery.
- ix. ix) If necessary to remove battery from service, always remove grounded terminal from battery first. Make sure all accessories are off, so as not to cause an arc.
- x. Be sure area around battery is well ventilated.
- xi. Clean battery terminals. Be careful to keep corrosion from coming in contact with eyes.
- xii. Study all battery manufacturers' specific precautions such as removing or not removing cell caps while charging and recommended rates of charge.
- xiii. Add distilled water in each cell until battery acid reaches level specified by battery manufacturer. This helps purge excessive gas from cells. Do not overfill. For a battery without cell caps, carefully follow manufacturer's recharging instructions.

3. BATTERY CHARGER LOCATION

- i. Never place battery charger directly above battery; gases from battery will corrode and damage converter.
- ii. Never allow battery acid to drip on battery charger when reading gravity or filling battery.

4. DC CONNECTION PRECAUTIONS

- i. Connect and disconnect all DC connections only after setting battery charger switch to off position.

Analytic Systems does not recommend the use of the BCD800 Series Battery Chargers in life support applications where failure or malfunction of this product can be reasonably expected to cause failure of the life support device or to significantly affect its safety or effectiveness. Analytic Systems does not recommend the use of any of its products in direct patient care.

Examples of devices considered to be life support devices are neonatal oxygen analyzers, nerve stimulators (whether used for anesthesia, pain relief, or other purposes), autotransfusion devices, blood pumps, defibrillators, arrhythmia detectors and alarms, pacemakers, hemodialysis systems, peritoneal dialysis systems, neonatal ventilator incubators, ventilators for both adults and infants, anesthesia ventilators, and infusion pumps as well as any other devices designated as "critical" by the U.S. FDA.



Introduction

Our all new single board design incorporates state of the art switchmode technology for unmatched efficiency and ultra-quiet operation. Multiple stages of filtering reduce radiated or conducted noise to very low levels. Safety features include reverse input protection, over-temperature shutdown, current limiting, short circuit protection with automatic recovery, input undervoltage shutdown, reverse battery protection and output overvoltage crowbar.

Specifications

Model	BCD800-12-12	BCD800-12-24
Input Volts (DC)	10.5 - 14	10.5 - 28
Input Amps (max)	60	
Output Volts (DC)	13.6 V	27.2 ± 0.05
Charging Amps*	50	
Output Crowbar	Output Volts x (1.3 ± 1%)	
Input Fuses	ATC 40 x 2 Amp	
Output Fuses	ATC 40 x 2 Amp	
Battery Banks	1	
Stages	2	
Battery Size (Amp Hours)*	168 - 252	
Transient Response	< 1V for 15A Surge	
Efficiency	> 85 % @ maximum output	
Temperature Range	-25°C to +55°C @ maximum output	
Isolation	Any Input or Output to Case 500VDC	
Length	46.6cm	
Width	35.5cm	
Height	13.5cm	
Clearance	1 Inch (2.5 cm) all around	
Material	Steel	
Finish	Black Chromate / Powder Epoxy Coat	
Fastenings	18-8 Stainless	
Weight	12.8Kg	



The Actual charging rate depends upon the input/output voltage ratio. To obtain the charging capacity at any given input voltage, use the following formula

Charging Current = Input Volts/Output Volts x 50

For example, at 10.6VDC in and 13.6VDC out, the charging current = $10.6/13.6 \times 50 = 39$ am

Designed and manufactured by: **ANALYTIC SYSTEMS WARE (1993) LTD.**

8128 River Way

Delta, BC V4G 1K5 Canada

www.analyticssystem.com

p. 604.946.9981 f. 604.946.9983

tf. 800.668.3884 US/Canada

analyticinfo@analyticssystem.com Revised July 2014

Installation

MOUNTING

Mount the unit in a DRY location. Allow at least 1 inch of clearance for adequate cooling.

POWER CONNECTION

Four studs are provided at one end of the unit for connecting input and output leads. Connect ring terminal leads as follows:

- Input Positive to INPUT POSITIVE stud
- Input Negative and Output Negative to COMMON NEGATIVE stud
- Output Positive to OUT POSITIVE studs






Operation

The BCD800 does not have an on/off switch. A DC breaker/switch rated for 100 amps is required on the input side.

With the input switch turned off, secure the input and output ring terminal connectors to the charger as detailed in the POWER Connection section. Turn on the input power switch.

2 Stage Charging

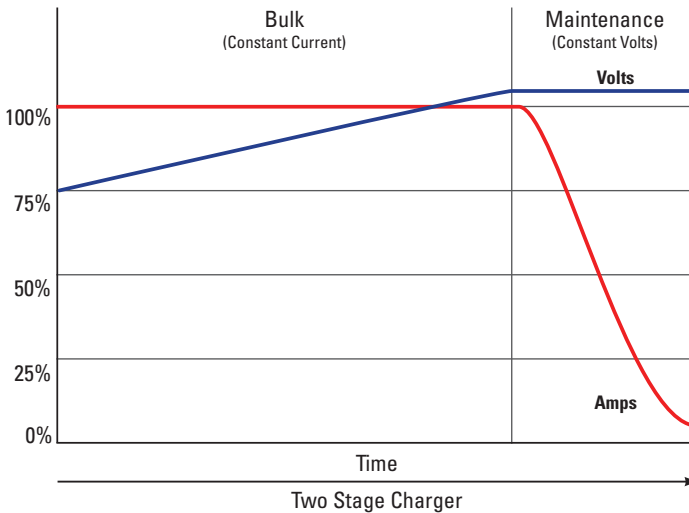

A two-stage charger provides a constant current until the battery reaches its rated capacity and then switches to a "float" voltage. The current then reduces as necessary to maintain the battery at the float voltage. The charger can be connected to the battery indefinitely and will provide the appropriate profile. A two-stage charger is recommended in most instances since it is the most versatile and can be permanently connected to attenuate the characteristic discharge of unused batteries. A load can be put on the battery or batteries without altering its ability to keep the battery at optimal charge.



Troubleshooting

If the load exceeds the continuous rating for too long a period, the internal temperature sensor will cause the unit to stop boosting the input voltage until the unit has cooled down. After the unit has cooled down, normal operation will resume.

If the input voltage drops below the specified minimum input, the unit will stop charging and alarm will sound until input voltage is above the minimum input level.

If the output voltage drops below the specified minimum, the unit will sound the alarm.

If the current demanded by the devices connected to the unit exceed the maximum current rating, the fuse will blow.

If the fuse blows with no load connected, check that the power leads are connected to the battery with the correct polarity; if they are then the unit is damaged and must be returned for repair.



Special Services & Options

Conformal Coating	INCLUDED ON ALL UNITS UNLESS REQUESTED NOT TO as of April 1, 2014
Option "c"	Ruggedization Package (EXTRA Conformal Coating and RTV Compound)
Option "v"	Marine / Industrial Pkg (EXTRA Conformal dipping and RTV Compound)
Option "MS"	Military Pkg (incl. Wide Temp Components, Conformal Dipping and RTV Compound)
Option "w"	Wide Temperature Operation (-40 to +55 C, incl)
Option "SM"	High Voltage Protection on the DC Input Side
Option "d"	Paralleling Diodes
Option "FI"	Forklift Modifications
Option "F"	Open Frame - No chassis just heat sink bars (not for all products)
Special Input	There is no charge for nominal output voltages (ie. 12.0, 24.0, 48.0), but this must be noted at the time of order (Contact Factory for details)
Special Output	
Water tight options	IP66, IPS67, IPS68





Limited Warranty

1. The equipment manufactured by Analytic Systems Ware (1993) Ltd. (the "Warrantor") is warranted to be free from defects in workmanship and materials under normal use and service.
2. This warranty is in effect for:
 - a. 3 Years from date of purchase by the end user for standard products offered in our catalog.
 - b. 2 Years from date of manufacture for non-standard or OEM products
 - c. 1 Year from date of manufacture for encapsulated products.
3. Analytic Systems will determine eligibility for warranty from the date of purchase shown on the warranty card when returned within 30 days, or
 - a. The date of shipment by Analytic Systems, or
 - b. The date of manufacture coded in the serial number, or
 - c. From a copy of the original purchase receipt showing the date of purchase by the user.
4. In case any part of the equipment proves to be defective, the Purchaser should do the following:
 - a. Prepare a written statement of the nature of the defect to the best of the Purchasers knowledge, and include the date of purchase, the place of purchase, and the Purchasers name, address and telephone number.
 - b. Call Analytic Systems at 800-668-3884 or 604-946-9981 and request a return material authorization number (RMA).
 - c. Return the defective part or unit along with the statement at the Purchasers expense to the Warrantor; Analytic Systems Ware (1993) Ltd., 8128 River Way, Delta, B.C., V4G 1K5, Canada.
5. If upon the Warrantor's examination the defect proves to be the result of defective material or workmanship, the equipment will be repaired or replaced at the Warrantor's option without charge, and returned to the Purchaser at the Warrantor's expense by the most economical means. Requests for a different method of return or special handling will incur additional charges and are the responsibility of the Purchaser.
6. Analytic Systems reserves the right to void the warranty if:
 - a. Labels, identification marks or serial numbers are removed or altered in any way.
 - b. Our invoice is unpaid.
 - c. The defect is the result of misuse, neglect, improper installation, environmental conditions, non-authorized repair, alteration or accident.
7. No refund of the purchase price will be granted to the Purchaser, unless the Warrantor is unable to remedy the defect after having a reasonable number of opportunities to do so.
8. Only the Warrantor shall perform warranty service. Any attempt to remedy the defect by anyone else shall render this warranty void.
9. There shall be no warranty for defects or damages caused by faulty installation or hook-up, abuse or misuse of the equipment including exposure to excessive heat, salt or fresh water spray, or water immersion except for equipment specifically stated to be waterproof.
10. No other express warranty is hereby given and there are no warranties that extend beyond those described herein. This warranty is expressly in lieu of any other expressed or implied warranties, including any implied warranty of merchantability, fitness for the ordinary purposes for which such goods are used, or fitness for a particular purpose, or any other obligations on the part of the Warrantor or its employees and representatives.
11. There shall be no responsibility or liability whatsoever on the part of the Warrantor or its employees and representatives for injury to any person or persons, or damage to property, or loss of income or profit, or any other consequential or resulting damage which may be claimed to have been incurred through the use or sale of the equipment, including any possible failure of malfunction of the equipment, or part thereof.
12. The Warrantor assumes no liability for incidental or consequential damages of any kind



ANALYTIC SYSTEMS

Power Conversion Solutions

An ISO9001 and AS9100 Registered Company Battery Chargers • Inverters • Power Supplies • Voltage Converters

8128 River Way, Delta B.C. V4G 1K5 Canada T. 604.946.9981 F. 604.946.9983 TF. 800.668.3884 (US/CANADA)

www.analyticsystems.com